User Manual
English

Bea-fon S33

General Information

Congratulations on the purchase of your Bea-fon S33!

Please read this information before using the phone to make a better use of your phone. We are not responsible for any damage due to your misunderstanding of this information and misacting.

We are endeavoring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-supported features. Please contact your network operator for further information.

Please check the package contents to ensure that all components listed below are included. If the product is defective or if there is a component missing, immediately contact the retailer where you purchased this handset.

General Information

Your Bea-fon S33 box contains:

- 1 mobile phone (S33)
- 1 desktop charger (S33)
- 1 travel charger (S33)
- 1 battery (S33)
- User manuals (S33)

If you find the size of the script not easily readable for you, you can also find this manual on our website, where you will be able to adjust the size of the script.
Go to: www.beafon.com

Device Code:

This device code ensures that unauthorized persons will not be able to use your phone. The default code is 1122.

PIN-Code:

The PIN-code was supplied to you by your network operator together with your SIM card and/or adjusted/set up by yourself.

Direction

General Information 2
Device Code: 3
PIN-Code: 3
Direction 4
My Phone 6
Keys Description 8
Icons Description 9
My Phone 10
Power-on and Power-off 10
Lock the Keypad 10
Favorite numbers 10
Phonebook 11
Add new contact 11
Make a call 11
Make a call from phonebook 11
Speed dial 12
Activation Speed dial function 12
Adding speed dial numbers 12
Message 12
Writing and sending SMS 12
Inbox 13
Outbox 13
Drafts 13
Sent messages 14
Advanced 14
SMS settings 14
Voicemail 14
Call center 14
Call history 14
Call settings 15
Organizer 16
Alarm 16
Tasks 16
Calculator 16
Torch 17
Service 17

FM radio 17
FM radio 17
Settings 18
Tone settings 18
SOS Settings 18
Phone settings 20
Setup Time and date 20
Language 20
Pref. input method 20
Auto keypad lock 20
Setup wallpaper and LCD backlight 20
Network settings 21
Security settings 21
Connectivity (Bluetooth) 21
Restore factory settings 22
Basic Specifications: 22
FAQ 23
Battery 25
Phone 26
For your safety 28
Certification information (SAR): 32
Information 32
Information: 33
Address: 33

My Phone

1	Left menu key
2	Arrow key left and favorit numbers
3	Dial Key
4	Key * / + / p / w / In write mode choose a symbol
5	Loudspeaker
6	Arrow key up / short key message
7	Right menu key
8	Arrow key right / Keylock
9	Power on/off key / call end key
10	Arrow key down / Short key alarm
11	# Key: on the starting screen, by holding this button you activate / deactivate silent mode. In edit mode, change the input method.
12	SOS button
13	Charger micro USB port
14	Polyphon speaker

Note!
Turn off the phone and disconnect the charger before removing the battery cover.

Installing the SIM Card and battery
1.Remove the battery cover.
2.Insert the SIM card by carefully sliding into the holder. Make sure the SIM card's contacts are facing inwards.
3.Insert the battery by sliding it into the battery compartment.
4.Replace the battery cover.

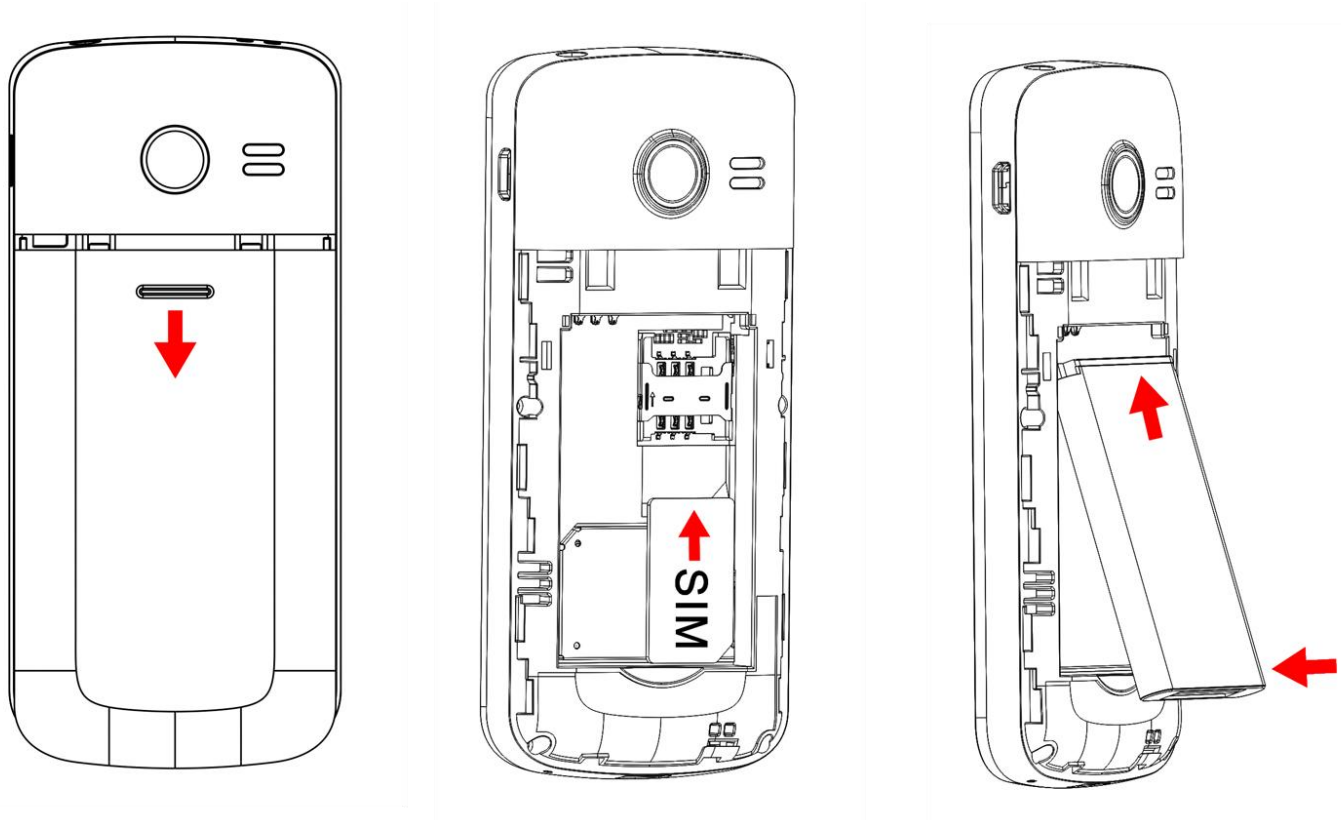

Keys Description

Key		Function
Left menu key		Main menu and confirmation key
Right menu key		Phonebook and return key
End key		Short press：return to the standby mode and hang up the call Long press: power off or power on the mobile phone
Send key		Enter call records and dial up a call
Navigation key	Up	Write message
	Down	Alarm
	Left	Favorite
	Right	The lock key
Key	0	Short press： enter 0 Long press:Torch on/off
	1	Short press：enter 1 Press and hold it: set the voice mailbox number
	2-9	Short press：enter 2 to 9 Long press: dial up the corresponding number set in the fast dialup function
	*	Short press：Enter the number input page and enter *
		Long press: Enter * + P W
	#	Short press： Enter the number input page and enter #
		Long press: Change between the silent profile and the current profile

Icons Description

Icon	Description
	Network signal strength of SIM
	Current battery capacity
	There are unread short messages on SIM
	There are un-received calls on SIM
	There are forwarded calls on SIM
	The alarm is enabled
	Keylock
	The current profile is the standard profile
	The current profile is the silent mode
	The current profile is the vibrate and ring
	The current profile is the vibrate only
	The current profile is the vibrate then ring
	Headset Mode
	This icon shows when your phone is in roaming state. SIM card is roaming.

Power-on and Power-off

When phone is in the power-off status, press and hold the 【End key】 to power on phone.
When phone is in the standby status, press and hold the 【End key 】, to power off phone.

Lock the Keypad

Lock the keypad in two ways:
Automatically locked: According to the "Settings - Phone settings - Auto keypad lock" menu, the phone is automatically locked by the keypad lock time.

Manually locked:
In the standby screen, press to enter the locked state.
Note: On the locked state, press any key to bright the phone, pop-up the screen of unlock prompt.

Favorite numbers

Add new Favorite

1.Press enter into Phonebook.
2.Select a number and press **Edit**
3.Select **From phonebook** and press **OK**
4.Use scroll to view the Contacts
5.Press **OK** and **Yes** to save the contact.

Call Favorite numbers

1.Press enter into Phonebook.
2.Select a number and press .

Phonebook

Add new contact

1.Press enter into Phonebook.
2.Select **Add new contact** and press **Option**.
3.Press **OK** to choose add contact **To phone** or **To SIM**.
4.Use scroll to Edit **Name** and **Number**.
5.Press **option** and **save** to save the contact.

Note: Press twice for the international prefix **+**
Always add + before the country code for making international call.

Make a call

1. In standby, enter the phone number including the area code, delete with **Clear**.
2. Press to dial and press **Abort** or to cancel calling.

Make a call from phonebook

1.Press to open the phonebook.
2.Use scroll to view the contacts or quick search by pressing the first letter of the name.
3.Press to call the selected contacts.

Speed dial

1.Press enter into Phonebook.
2.Select **Contact** and press **Option**.
3.Select **Speed dial** and press **OK**.
The numerical keys 2-9 can be used for speed dialing.

Activation Speed dial function

1.Press select and press **OK**.
2.Select **Speed dial** and press **OK**.
3.Select **Status** and press **OK**.
4.Select **On** and press **OK**.

Adding speed dial numbers

1.Press enter into Phonebook.
2.Select **Contact** and press **Option**.
3.Select **Speed dial** and press **OK**.
4.Select **2** and press **Add** to add phone number from phonebook for numerical key "**2** ".
5.Press **Yes** to save the speed dial number.
6.Repeat the step, the same way to add speed dial entries for others numerical keys.
To speed dial, Press and hold the corresponding key.

Message

Writing and sending SMS

1.Press scroll to and press **OK**.
2.Select **Write SMS** and press **OK**.
3.Input message.

4.Press **Options** to send message.

Inbox

1.Press scroll to and press **OK**.
2.Select **Inbox** and press **OK**.
3.Select a message from the list and press **Option** and **view** the read message.
4.Press option you can see:

View
Read the message
Reply
Input your message and send to the sender.
Delete
Press Select to delete the message.
Copy to Phone/SIM
Copy the message to the Phone or SIM
Move to Phone/SIM
Move the message to the Phone or SIM
Delete all
Press **OK** to delete all messages in Inbox folder.
Copy all
Press **OK** to copy all messages in Inbox folder to Phone or SIM.
Move all
Press **OK** to move all messages in Inbox folder to Phone or SIM.

Outbox

Here you can see the messages which you not send out.

Drafts

Here you can see the messages which you saved.

Sent messages

Here you can see the messages which you sent.

Advanced

SMS settings

Here you can set the Profile, Short Message Service Centre (SMSC) etc.

Voicemail

Voicemail is a service supplied by your network operator. For more information and for the voice mailbox number, contact your network operator. When you have a new voice mail message, your phone will receive a message.

Note: In standby mode: Press and hold key number 1 for directly calling the Voice mail. Only the number saved under voice mail address 1 is called.

Call center

Call history

All received, missed, dialed calls are saved in call center.

View call history

1.Press scroll to and press **OK**.
2.Select **Call history** and press **OK**.
3.Use scroll to view the call logs.
4.Press OK to see call log details.
5.Press Options you will see:

Call
Make a call
View
View the details for the call

Send text message
Send SMS to the selected number
Save
Save the selected phone number
Delete
Delete the call log
Edit before call
Edit the phone number before make a call

Call settings

1.Press scroll to and press **OK**.
2.Select **Call settings** and press **OK**.
3.Then you can see:
Caller ID
Caller ID may be used to display a caller's telephone number: **Set by network, Hide ID and Send ID**

Call waiting
When this network service is activated, the network notifies you of a new incoming call while you have a call in progress. Press **OK** to answer the waiting call. The first call is put on hold or press the red key to reject the call.
Call divert
To divert your incoming calls to your voice mailbox or some other phone number (network service). Select the divert option you want. Several divert options may be active at the same time.
Call barring
With this network service you can restrict the making and receiving of calls with your phone.
Call time reminder
Press **OK** to select **Off/Single/Periodic**.

Organizer

Alarm

1.Press scroll to and press **OK**.
2.Press scroll to Alarm and press **OK**.
3.Press **Edit** to select status on/off.
4.Enter the **Time** directly by keypad.
5.Enter **Snooze** time (min)
6.Scroll to select **Repeat**, **Alarm volume** and **Alert type**.
7.Press Yes to save .
8.To Edit the alarm ,press Edit, to stop it, press Off.

Tasks

1.Press scroll to and press **OK**.
2.Press scroll to **Tasks** and press **OK**.

Add Task

1.Subject: Press **Option** and **Edit** to enter a Name for the event.
2.Priority: Set the priority
3.Due Time: Enter date and time for the event.
4.Alarm: Set Alarm tome
5.Repeat: Set repeat times for the event.
6.Details: Enter more information about the event .
7.Status: Set the Status **Done/Undone**
8.Press **Option** and S**ave** to the save the event.

Calculator

1.Press scroll to and press **OK**.

2.Press scroll to **Calculator** and press OK.
3.Enter the first number and use "**#**" to enter decimal point.
4.Use to select(+ - * ÷)
5.Enter the next number and press **LSK**. The result is shown on the screen.

Torch

Set the Torch **on** or **off**

Service

The Service dependent's on our Network operator.

FM radio

FM radio

1.Press scroll to and press **OK**.
2.Press **Option** to view Channel list.
3.Select Manual input can input the channel you prefer.
4.Select Auto search can auto search your local radio channel.
5.Press the key (arrow up and down) to set volume and
6.Press the key (arrow key left and right) will increase or reduce 0.1 HZ.

Note: The listening effect will be influenced while listening indoors or the phone is shield. You can use the following ways to improve the effect: close to the window, plug in and

change the position of headphones line or adjust the channels by hand.

Settings

Tone settings

You can set the rings of incoming call, alarm, on ect.

1.Press scroll to and press **OK**.

2.Press scroll to **Tone setting** and press **OK**.

Incoming call
Set the ring tone for incoming calls
Alert type
Select whether an incoming call should be signaled by Ring only, Vib. only, Vib.and ring, Vib. then ring (Vib. = vibration) or Silent mode.
Ring volume
Set the volume for the incoming call
Ring type
You can select Single, Repeat or Ascending
Message
Set the tone for a received SMS.
Message volume
Set the volume for the message
Keypad
Select whether the confirmation of a pressed button should be confirmed with a Silent, Click, Tone or Human voice tone.
Keypad volume
Set the volume for the keypad

SOS Settings

Status
Set On or Off the SOS function.

SOS number

There you can edit and save at most five SOS number in your phone.

SOS Message

Edit the content of the SOS message which will be sent out automatically when the SOS function is using.

Functionality

By pressing the SOS button, the S33 will send an SOS Message person (in case mobile number or telephones with SMS function is available for emergency contact) to the emergency numbers you have previously saved and will be automatically dialed in the given sequence. The mobile phone switches on the hands free function at full volume and at the same time, if the SOS call is not answered within 25 seconds the next number is dialed etc.

Attention: If the SOS call is forwarded to the voicemail, the SOS mode will end.

Note:

- If you want to stop or cancel the SOS call, press the **RSK** button.
- When changing a phone card: Always make sure that there is sufficient credit on your phone card because private emergency numbers cannot be dialed without sufficient credit.
- As a rule, the international emergency call 112 can still be called outside of the regional network of your network operator.

Phone settings

1.Press scroll to and press **OK**.

2.Press scroll to **Phone settings** and press **OK**.

Then you can setup as below:

Setup Time and date

1.Select **Time and date** and press **OK**.
2.Enter Time, Date, Date format and press **Save**.

Language

1.Select the **Language** and press **OK**

2.Use scroll to select a input method form the list and press **OK**.

Pref. input method

1.Select **Pref.input method** and press **OK**.

2.Use scroll to select a input method form the list and press **OK**.

Auto keypad lock

Select the **Auto keypad lock** and press **OK**

Turn off and on auto keypad lock

Setup wallpaper and LCD backlight

1.Select **Wallpaper** and press **OK**.
2.Then you can choose a wallpaper.
3.Press OK to save .

4.Use scroll to Brightness and press OK.

5.Use to adjust the Brightness.

6.Use to adjust the seconds.

Network settings

1.Press scroll to and press **OK**.

2.Press scroll to **Network settings** and press **OK**.

Network selection

Here you can search or select your local networks.

Preferred networks

Here you can select your preferred networks

Security settings

1.Press scroll to and press **OK**.

2.Press scroll to **Security settings** and press **OK**.

Here you can do security settings for SIM card, phone

SIM security

Here you can setup PIN lock status on or off.

Change PIN code

Phone security

Here you can setup Phone lock status on/off.

Change password

Connectivity

1.Press scroll to and press **OK**.

2.Press scroll to **Connectivity** and press **OK**.

3.Press scroll to **Bluetooth** and press **OK**.

Your options include:

Blutooth:

ON or OFF the Bluetooth function

Visibility:
ON or OFF the visibility.
My device:
Show the device which is connected and paired
Search audio device:
Search for the audio device.
My name:
Edit the name of Bluetooth.
Advanced:
Set up **Audio path** and view the device address of Bluetooth.
Audio path:
You can select leave in phone or forward to Bluetooth headset.
My address:
View Bluetooth address.

Restore factory settings

4.Press scroll to and press **OK**.

5.Press scroll to **Security settings** and press **OK**. Press **OK** and input password (1122) to reset your phone.

Basic Specifications:

Network – Dual-Band:	GSM 900/DCS1800
Dimension:	111 x 51 x 13,5 mm
Battery:	Li-ion 3.7V - 800mAh
Standby time:	<250 hours*
Talk time:	<480 minutes*

**Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.*

FAQ

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or network operator.

Can’t turn the phone on:

- Check battery installation, please install battery correctly.
- Check if battery level is low, change a battery or charge the battery.
- Check if entered incorrect PIN code 3 times in a row. If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

SIM error:

- Is the SIM card dirty? Please clean it.
- Try and reinstall the SIM card.
- Is the SIM card damaged? Please contact your network operator.

Weak signal or no signal:

- You may be in a location where the reception is bad, such as tunnel or cellar, please relocate and try again.
- You can try turning around slightly or get near the window if you are in a room.
- Please contact your network operator, if you still have a weak signal or no signal.

Bad talking quality:

- Weak signal? See: Weak signal or no signal.

- Check if battery if battery is low. Charge the battery or change the battery.
- Use the up volume key to adjust the microphone volume during a call.

Can’t make a call:
- Check if you enter the correct number and press green key.
- Check if you set call barring, if yes, please cancel it.
- Check if the SIM card is registered in the network.
- If your SIM card is a prepaid card, please make sure there is enough money on the card.

Can’t receive calls:
- Is the SIM card registered in the network?
- Check if your phone is turned on.
- Check if screens shows no signal, if yes, see: Weak signal or no signal.
- Check if you set call barring, if yes, please cancel it.

Screen is dark:
- Check if battery if battery is low. Charge the battery or change the battery.
- Adjust the wallpaper.
- Your phone may be affected with damp, keep it dry.

PIN locked:
- Check if entered incorrect PIN code 3 times in a row. If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

Tips: if all suggests and solutions can’t solve your problem, please check Customer Service on www.beafon.com. Please do not disassembly or repair your phone without professional guide.

Battery

- Your phone is powered by a rechargeable battery.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.
- When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer.

- Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than 10 days, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Use the battery only for its intended purpose.
- Never use any charger or battery which is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C. A phone

with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries performance is particularly limited in temperatures well below freezing.
- Do not dispose of batteries in a fire!
- Dispose of batteries according to local regulations (e.g. recycling).
- Do not dispose as household waste.
- Do not charge your mobile phone if the battery is not installed.

Phone

Your phone is a product of superior design and craftsmanship and should be treated with care.
The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.

- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the

- phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility.

Read these simple guidelines. Breaking the rules may be dangerous or illegal.

Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Road safety comes first
Do not use a hand-held phone while driving.

Switch off in aircraft
Wireless devices can cause interference in aircraft.

Switch off in hospitals
Follow any regulations or rules. Switch the phone off near medical equipment.

Switch off when refueling
Do not use the phone at a refueling point. Do not use near fuel or chemicals.

Interference
All wireless phones may get interference, which could affect performance.

Traffic Safety:

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop. Remember road safety always comes first!

Operating environment:

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid.

Always secure the phone in its holder, because metallic materials may be attracted by the earpiece.

Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices:

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers:

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent.

Research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids:

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your network operator.

Other medical devices:

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Posted facilities:

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres:

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles:

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Certification information (SAR):

This model phone meets the EU requirements for exposure to radio waves.
The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg. Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.
The highest SAR value for this device when tested at the ear was **0.415 W/kg.**

If you want a copy of the Declaration of Conformity, please contact us: support@beafon.com

Information

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.
Liability Disclaimer:

- Bea-fon Mobile GmbH shall not bear any liability for any relevant, indirect, special, incidental, or inevitable injuries caused by using of this product, including injuries which have been considered, or unconsidered, likely to happen.

- For any losses caused by natural disasters (such as earthquake, flood, etc.) or any acts or accidents (including deliberate or accidental misuses by the user under these accidents or other unusual circumstances) which are beyond our liability scope, non-responsibility should be accounted on us.

Information:

S33 distributed by Beafon mobile GmbH
For more Information, please visit the Bea-fon Homepage: www.beafon.com or contact us: support@beafon.com

Address:

BEAFON MOBILE GmbH
4722 Peuerbach
Enzing 4
Austria